



Female Coupling Replacement

1

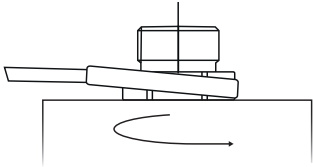


Unscrew the damaged female coupling.

2

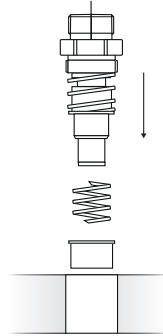

Reassemble the new female coupling.

3

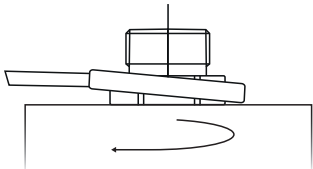

Re-screw the new female coupling with the following torque:

Size	Torque
1/4"	50 Nm
3/8"	50 Nm
1/2"	70 Nm
3/4"	90 Nm
1"	100 Nm
1 1/2"	120 Nm