


Male Coupling Seal Replacement

1

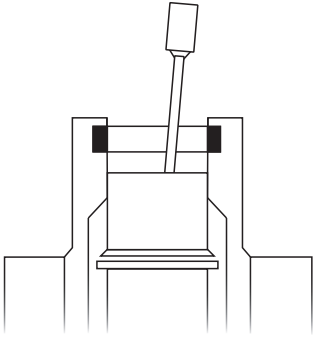


Block the plate in a vice and pull back the valve with a non sharp tool. Keep back the valve.

2

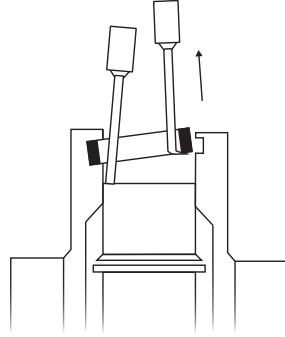


Remove the damaged seal with the help of an hook and pick tool.

3

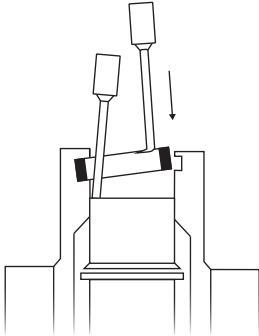

Carefully clean and lubricate the groove. Insert the seal.

4

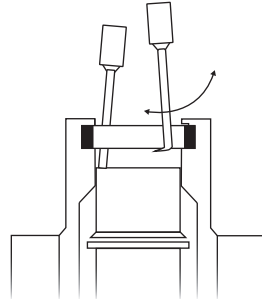

Ensure that the seal is well arranged in its groove and release the valve.