
Ordinary Maintenance

Before each connection clean the mobile and fixed part and the reference pins. Lubricate periodically all the moving components.

Once is disconnected, please close the automatic dust cap.

Place the mobile part on the suitable support when it is not used.

