



---

## Cable Assembly

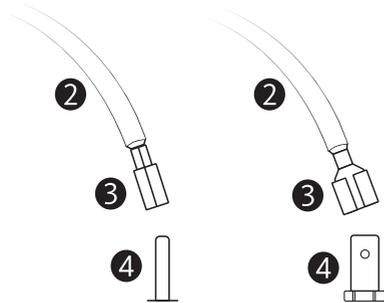

Connect the cable side terminal 3 to the connector side terminal 4.

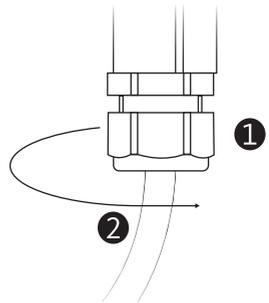

Block the cables 2 with the pressing cable 1.