


Faster

UHP SERIES INSTRUCTIONS FOR USE

This product is safe and completely reliable when correctly used. It is subjected to very high internal pressure. Always follow these simple instructions and use the most suitable protection devices.


Connection

Completely unscrew the safety sleeve (1), covering the green band. Retract the main sleeve (2), making visible the red band. Insert the male (3) and release the main sleeve. Screw the safety sleeve completely, till the green ring is visible (4).

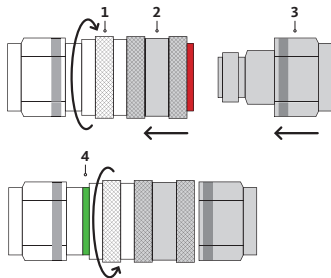

Visual Check

Connection is safe and complete when the red ring is **not visible** while the **green ring is fully visible**. If not, verify and repeat all the connection steps.

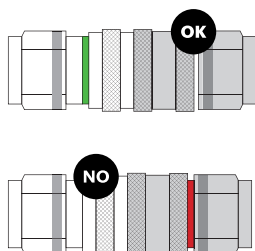

Disconnection

Unscrew the safety sleeve (1). Pull back the main sleeve (2), the male coupler (3) will disengage automatically.

